




Montageanleitung
Fitting Instruction
Notice de Montage

2
Abblendlicht
Low beam
Codes

1
Masse
Ground
masse

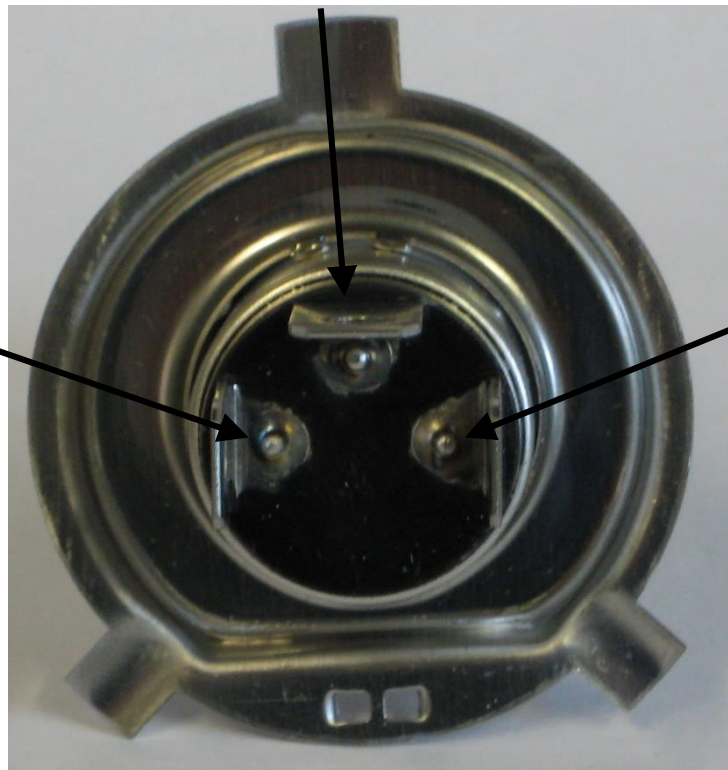

3
Fernlicht
High beam
Phares

730KL01.. / 730KL02.. / 730K009.. / 730SD02.. / 730SD03.. / 730Y105.. :

1 = grün / green / vert
2 = weiß / white / blanc
3 = blau / blue / bleu